



1998-2002 Toyota Corolla Engine Air Filter Replacement

A video guide on how to replace an old worn out engine air filter on the 1998-2002 Toyota Corolla.

Written By: eCuration



INTRODUCTION

The engine air filter should be replaced every 15,000-30,000 miles depending upon your driving habits.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.



TOOLS:

- [Pair of Hands](#) (1)



PARTS:

- [Engine Air Filter](#) (1)
-

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 12:41:26 AM.